

INSTALLATION


INSTALLATION OF THE DRAIN KIT

Your dryer may be supplied with a drain kit. This can be fitted so that the condensed water can be emptied into a waste-pipe instead of the water bottle in the machine. If a kit is not supplied, one can be obtained from your dealer.

The illustration shows the minimum space required by the dryer and the position of the waste-pipe within this space and behind the dryer. If a trap is fitted it must not obstruct the air inlet at the back of the dryer.


The waste pipe can be positioned on either side of the dryer.

If the waste pipe is used by both the dryer and a washing machine then its diameter must be large enough to contain both hoses - 1.5" bore (38mm) minimum.

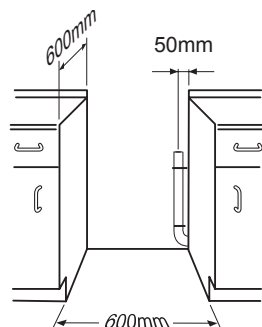

1. Unscrew the plastic nut **J** from the connector at the top, rear of the machine. Remove and discard the plastic disc. Keep the rubber washer **K**.
2. Push the flanged tube **L** into the connector as shown until the flange is fully seated.
3. Push the free end of the hose through the threaded end of the nut and pull through so that the flange of the plastic elbow, at the other end of the hose is seated against the inside of the nut.
4. Insert the rubber washer **K**.

5. Screw the nut onto the connector on the back of the machine and position the elbow so that the hose will fit into the waste-pipe. Shorten the hose if necessary. Tighten the nut.
6. Move the machine into its working position with the drain hose inserted into the waste pipe.

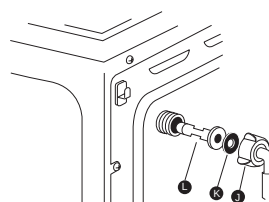



FINAL INSTALLATION

Push the filter into its operating position as shown in the diagram.


If you wish to change the side on which your door opens, see the instructions on the back page.

Remove any dust by wiping the drum and door with a damp cloth. Any initial smell from the heater should disappear after the first period of heating.

Position the tumble dryer so that the plug remains accessible after installation. Do not block the vent at the front of the dryer, as this will impair the working of the machine.

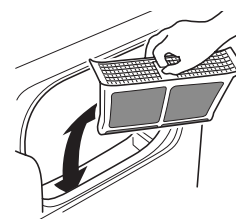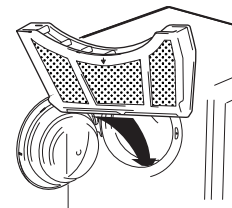

THE CONTROLS

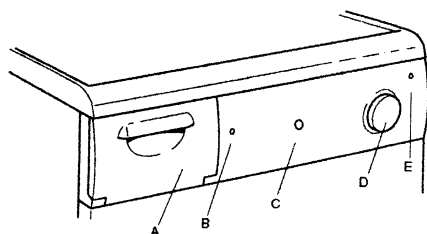

- THE WATER BOTTLE** (Behind the pull-down door): Must be emptied after every cycle (except when a drain hose kit is fitted).
- BOTTLE FULL LIGHT**: This will light up and the machine will stop if the water bottle is full or if it has not been pushed fully back into the correct position. If the bottle is removed and replaced during the cycle the start button must be pressed to restart the dryer.
- FINAL DRYNESS**: Select the desired final dryness of the load with a choice of a dry or extra dry setting.
- START BUTTON**: To start the drying cycle.
- NEON (IF 'B' IS NOT FITTED)**: This neon will light when the dryer has started, and will flash when the programme reaches the anti-creasing stage.

There are no Heat or Timer settings on these models. Check care labels inside the garments.

PREPARATION

CARE LABELS YOU MAY FIND ON YOUR FABRICS

☐	Suitable for tumble drying
☒	Tumble dry using full heat
☒	Tumble dry using half heat
☒	Do not tumble dry

Do not tumble dry woollen or wool mixture articles unless the article is labelled to be suitable due to a possibility of shrinkage.

Roll dripping wet articles in a towel to remove excess water.

Place delicate articles e.g. tights, scarves, inside a pillowcase.

To avoid the need to iron easycare polyester/cotton items it is better to only dry small loads (i.e. half fill drum).

It is better to dry small and large articles together.

We suggest a fabric conditioner to be used to reduce static electricity.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the airflow through the dryer is not obstructed.

Do not place items contaminated with inflammable substances in the dryer, such as petrol, cleaning solvents, cooking oil, fat, or hair lacquer. These can cause fires. For the same reason, do not dry rubber, foam rubber, plastic or paper.

OPERATION

Open the door.
Load clothes loosely into the drum.
Load sheets first starting with one corner.
Close the door.
Dry your hands.
Plug in the machine.
Select either dry or extra dry, using the button.
Press the start button.

If the machine has no load in the drum it will switch off automatically after approximately 40 seconds

The drum will now begin to rotate and will stop automatically when your clothes are dry. The drum will stop and turn in the other direction for a short while every few minutes.

There is an automatic 12 minute cool down period at the end of every cycle, during which the heater is switched off. This helps to minimise creasing. The dryer on neon will remain lit until the end of the cycle.


At the end of the cycle the neon will flash to indicate that the dryer is in anti-crease. The drum will rotate periodically until you open the door or disconnect from the mains to stop it. This helps to minimise creasing.

If the door is opened during a cycle the dryer will stop. If a load is checked mid cycle restart the appliance by, closing the door and pressing the start button. When drying large items such as sheets, we suggest you periodically stop the dryer to redistribute the load.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM.

AFTER REMOVING THE DRIED CLOTHES

ALWAYS CLEAN THE FILTER. Failure to do so could cause the safety cut-out to operate.

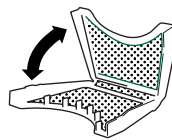


- Pull the filter upwards and away from the appliance.
- Remove any threads or fluff by hand or with a soft brush.
- Slide the filter back.



- Wash the filter occasionally in detergent solution using a soft brush to remove small particles.

ALWAYS EMPTY THE WATER BOTTLE

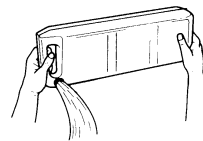

- Open the door, pull out and empty the bottle.
- Replace the bottle ensuring that it is pushed all the way in - if it is not, the dryer will not operate.
- If the dryer is connected to a drain there is no need to empty the bottle but it must be correctly fitted to the machine.

ADDITIONAL INFORMATION

ANY PROBLEMS

If the clothes are **not dry** after normal drying time:

- Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.
- Check that the machine has the correct weight load in the drum, this machine will stop after approximately 40 seconds if the drum is empty.
- Check that the door striker is in place if the machine is a large door opening model.
- Check that the condenser unit and associated duct work are clean. If blocked these will restrict the airflow.
- Check that your dryer is heating - below the door to the left side, should feel warm to the touch after the first 10-15 minutes of its programme. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If it has operated then a sharp "click" will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean and that all other restrictions are removed before re-starting. If the cut-out continues to operate after checking the above points, you should contact your service agent.
- Check that you have selected the correct dryness setting.

If your machine **does not work** check the following before calling a service engineer:

- Check that there is a supply of electricity.
- Check that the door has been properly closed and the machine is switched on.
- Check that the water bottle has been withdrawn from, and replaced into the machine.
- Check the plug internal connections.

OPTIONAL EXTRAS

Drain Hose Kit

To enable your dryer to be connected to a drain to remove the need to empty the water bottle.

The above item can be purchased as an accessory for your tumble dryer from your supplier.

TECHNICAL DATA

OVERALL DIMENSIONS:

Height: 85 cm
Width: 59.5 cm
Depth: 58 cm

MAXIMUM DRY WEIGHT LOADS:

Cotton 6kg
(for minimum creasing 2kg)
Delicates 2kg

For electrical ratings see plate on back of dryer.

For Model No. see serial plate inside door (needed when requesting service).

Room temperature range 5°C to 30°C.

Your washing machine should have a spin speed of not less than 800rpm.

The 'dry' setting was used to rate the energy efficiency of this appliance.

IMPORTANT USER INFORMATION

These notes are provided in the interest of safety.
You must read them before installing or using the appliance.

- This tumble dryer is intended for **NORMAL DOMESTIC USE ONLY**.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- Please note it is not recommended that the dryer be placed directly next to ovens or cookers, as the performance of the dryer may be affected.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit
- It is important to clean the lint filter after each drying cycle and the condenser every three or four months or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than fitting authorised accessories.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the electricity supply if it is to be left unattended for long periods (i.e. weekends, holidays etc.)
- The rear of the dryer gets quite hot during use. Position the dryer so that the back is not accessible while in operation.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking.
- **DO NOT** use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.
- **DO NOT** block the air inlets at the front and back of your dryer.
- **DO NOT** allow fluff to accumulate around the tumble dryer.
- **DO NOT** exceed the recommended maximum load.
- **DO NOT** allow children to tamper with the controls and keep them away from the dryer when it is in operation.
- **DO NOT** place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- **DO NOT** attempt to dry dripping wet articles or items containing foam rubber or rubber-like materials.
- **DO NOT** use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury. Consult your local appointed service engineer and insist on genuine spare parts.




CAUTION HOT SURFACE

This label, positioned on the rear of your dryer, indicates the surface is hot when in operation - avoid touching

THIS APPLIANCE MUST BE EARTHED

IMPORTANT: PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS APPLIANCE.
KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.

GB

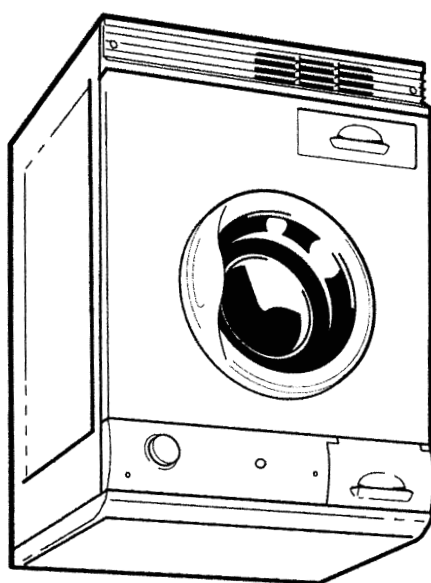

INSTRUCTIONS FOR USE

THE CONDENSER

The condenser and ducting should be cleaned 3 or 4 times a year or more frequently if the dryer is in constant use. See "CLEANING THE CONDENSER" opposite.

NOTE: The condenser will discolour through use.

REMOVING THE CONDENSER

- Firmly pull the condenser out.


RE-INSTALLING THE CONDENSER

- Carefully push the condenser back into the machine, until it is pushed fully home and a "click" is heard.
- Ensure all lint and fluff is removed from around the grille seal before closing or water may leak.
- **IMPORTANT:** The dryer may leak if the condenser is not correctly re-installed.

CLEANING THE CONDENSER

CAUTION: For maximum efficiency, the plates are made from very thin aluminium and are easily damaged. Do not try to poke anything between the plates or use a hard object or tool for cleaning. At all times, handle the condenser carefully and avoid crushing the plates.

- Remove the condenser (see opposite).
- Flush the fluff from between the plates under running water and carefully shake off excess water.

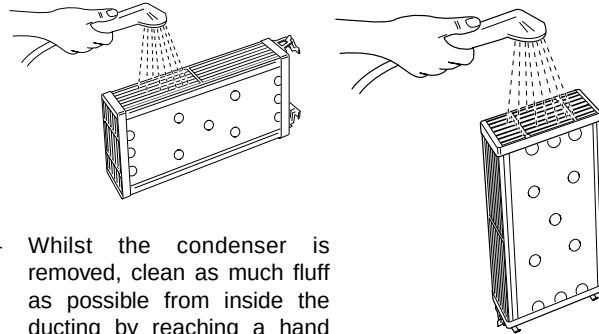


- Whilst the condenser is removed, clean as much fluff as possible from inside the ducting by reaching a hand into the machine. In particular, keep the passage from the fan clear (on the right hand side of the condenser duct).
- After cleaning, re-install the condenser (see opposite).

4213 094 88601


REVERSING THE DOOR OPENING

Your dryer is fitted with a reversible door. To change the direction of opening proceed as follows for your type of door.

Dryers fitted with hinge cover :-

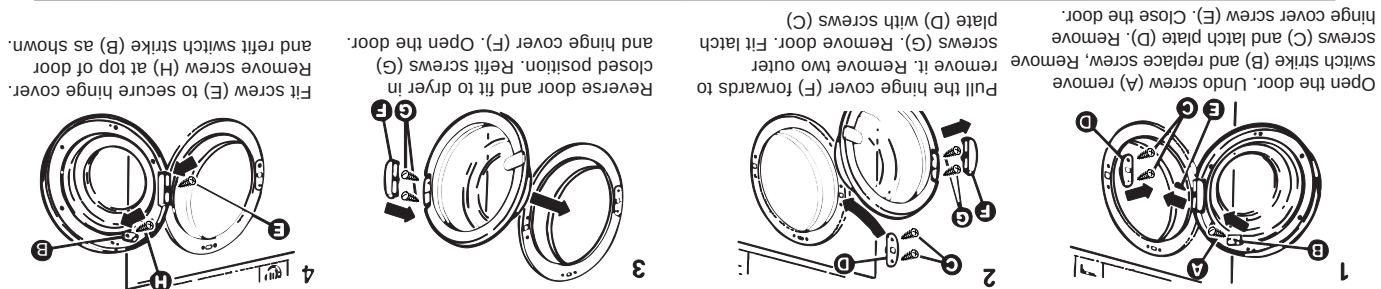

Dryers fitted without hinge cover :-

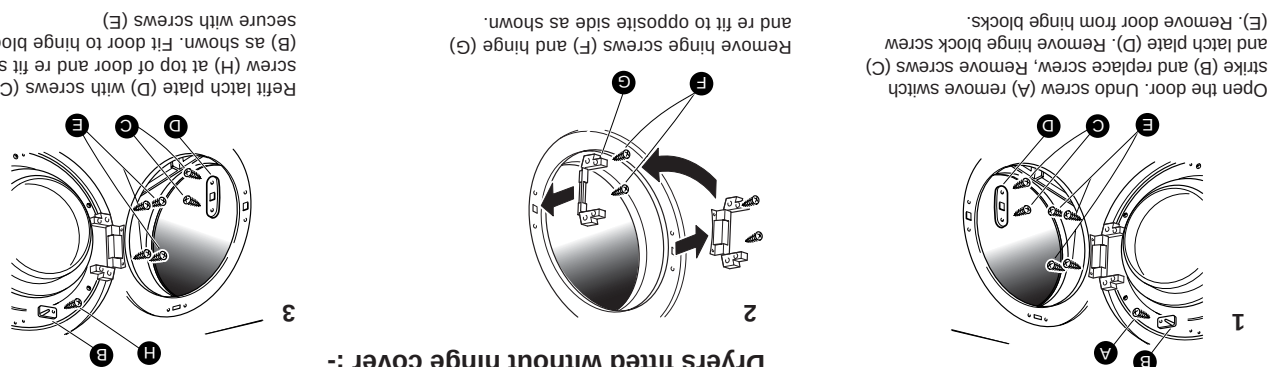

Large Door Opening :-

